


## Installing KumoScale for Appliance Mode: Multiple Node Deployment

This section explains how to install the KumoScale software on multiple nodes; where there is more than one master or at least one worker node.

To ensure KumoScale software is successfully configured where there is more than one master or at least one worker, it is helpful to understand the process at a high level. The diagram below illustrates the installation and configuration steps based on the Configuration requirements you have established in [Configuration Requirements](#). We will refer to this diagram in subsequent chapters.

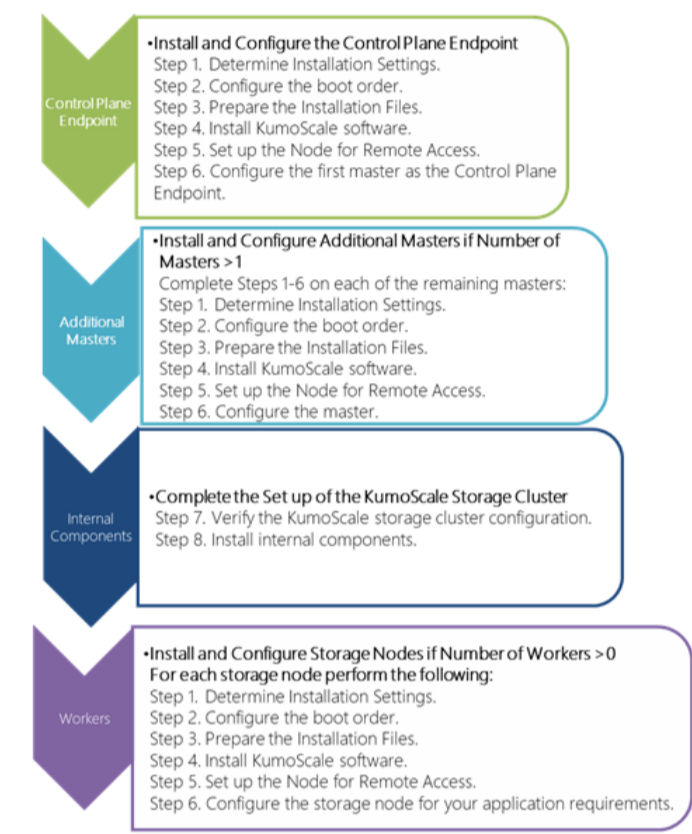

Although it is possible to install KumoScale software on all nodes and then configure the masters and storage nodes, we recommend installing and configuring each node one by one to ensure that the cluster is set up with storage nodes as needed.

**Next:** [Step 1: Determine Installation Settings](#)

---

---

---